Minimac 2

MODEL: MMD-USB COMPACT AUDIO MESSAGE REPEATER

- 1 MESSAGE LED (YELLOW):
 - Indicates the message number selecte by number blinks.
- 2 MEMORY OK LED (GREEN):

LED is ON if either an SD Card or a USB memory key with valid audio messages is detected by the system. Blinks if no files are detected.

3 SELECT PUSHBUTTON:

Allows user to select the current message position to record into, or play from.

Λ START/STOP PUSHBUTTON:

Starts or stops recording or playback based on current mode of system.

5 RECORD PUSHBUTTON:

Activates record setup mode.

6 TONE ADJUST KNOB:

Adjusts the Bass & Treble amount to deliver the best overall system performance.

7 LINE IN LEVEL KNOB:

Adjusts the audio level of the line input.

MIC IN LEVEL KNOB:

Adjusts the audio level of the microphone input.

9 POWER JACK (2 POS EURO):

Insert power adapter (sold separately)

10 MIC INPUT (1/8" MINI JACK):

Connect low impedance microphone for local recording.

MMD-USB Quikey

08 Jun 2011, Version 1.0
Mackenzie Laboratories, Inc.
1163 Nicole CT, Glendora, CA 91740 USA
TEL (909) 394-9007 FAX (909)394-9411
WWW.macklabs.com

9 10 11 12 13 14 15 16 20 20 19

COPYRIGHT POLICY

Recording, downloading or playing of copyrighted material such as sound effects, narration or music is unlawful unless permitted by a legal exception or consented to by the rights owner. Recording and download equipment should only be used with material that you have the legal right to copy and you are responsible for obtaining these rights, Mackenzie Laboratories, Inc. has no right to grant such permission.

11 LINE INPUT (RCA JACK):

Connect line level audio input for local recording.

12 LINE OUTPUT (RCA JACK):

Audio output level of up to +3dB into 600 Ω , this is a standard level for most applications.

13 SPEAKER OUTPUT (2 POS EURO):

Audio output level of up to 2.5W into 8 Ohm. Use this output if more drive is needed to reach a more comfortable listening level.

1 / REMOTE I/O (6 POS EURO) :

Provides remote access to Minimac's start and stop control and play relay output.

5 OUTPUT LEVEL KNOB:

Adjusts the volume to the both line level and speaker audio outputs.

16 SPEAKER PUSHBUTTON:

Turns local Monitor speaker ON/OFF.

17 RECORD LED (RED):

Used to display recording mode. Red light ON, indicates message (s) is being copied from USB memory key to SD Card.

18 PLAYING LED (GREEN):

This green LED is ON when the system is playing Pre-Recorded messages.

10 USB MEMORY KEY CONNECTOR:

Audio files can be copied directly from a USB memory key, to the system's internal memory.

20 MONITOR SPEAKER:

Allows user to preview message play back.